

KEY	026	159	175	716				KEY	Samsung
POWER	00 1100	00 1100	00 1100	00 1100					
▲	10 0000	10 0000	10 0000	01 0000					
PROG PROG	10 0001	10 0001	10 0001	01 0001					
▼	01 0001	01 0000	01 0000	01 0110					
▶	01 0000	01 0001	01 0000	01 0101					
1	00 0001	00 0001	00 0001	00 0001				1	00 0001
2	00 0010	00 0010	00 0010	00 0010				2	00 0010
3	00 0011	00 0011	00 0011	00 0011				3	00 0011
4	00 0100	00 0100	00 0100	00 0100				4	00 0100
5	00 0101	00 0101	00 0101	00 0101				5	00 0101
6	00 0110	00 0110	00 0110	00 0110				6	00 0110
7	00 0111	00 0111	00 0111	00 0111				7	00 0111
8	00 1000	00 1000	00 1000	00 1000				8	00 1000
9	00 1001	00 1001	00 1001	00 1001				9	00 1001
10	00 0000	00 0000	00 0000	00 0000				-/--	00 1010
11	00 1010	00 1010	00 1010	00 1010					
12	10 1000	10 0010	00 1111	×					
CH*P/C	00 1011	10 1101	10 0100	01 1110					
Pr◀▶	10 0110	00 1011	11 1011	01 0010					
→●	10 0011	01 1110	10 0110	11 0001					
→●←	10 0011	01 1110	10 0110	11 0001					
◀◻	11 0101	10 1001	11 0101	×					
◻▶	10 1010	10 1010	10 1010	×					
◀◀	10 0010	×	00 1011	×					
▶	10 1011	10 1011	10 1011	×					
▶▶	11 1000	10 1110	10 1110	×					
◻◻	11 1100	11 1100	11 1100	00 1111					
●	10 1100	10 1100	10 1110	10 1111					
■	10 1001	10 1101	10 1001	01 0110					
↓	10 1101	10 0110	10 1101	×					
3▶	11 1111	11 1111	11 1111	11 1111				◻	11 1111
A	01 1001	01 1010	01 1001	×				?	10 1111
B	01 1000			×					
C	01 0111			×					
D	01 0110			×					
E	11 0111			×					
F	11 0110			×					
G	11 0010			×					
H	01 0110			×					
☀	+	01 0010	01 0010	01 0010	×				
	-	01 0011	01 0011	01 0011	×				
○	+	01 1010	01 1100	01 1010	×				
	-	01 1011	01 1101	01 1011	×				
○	+	01 0100	01 0100	01 0100	×				
	-	01 0101	01 0101	01 0101	×				

